

Terminal must have the following minimum software versions support Enhanced Standard 1 DCC.

1. WINCE 5.0: 1800CE, 5000CE, 5300CE - Version: **US V01.04.14** and higher version.
2. WINCE 6.0: 1800SE, 2700, 4000W, 5000SE, and HALO (2600) - Version: **US V06.01.06** and higher version.
3. WIN ATM (WIN XP or WIN7): 5100T, 5300, 5600, and 7000(MBS5000) - Version: **US V01.04.00**

1. Log into the terminal using the Master Password.
2. Navigate to: Host Setup ->Host Address
Address - **ASAIATMSSL.ASAIATM.COM**
Port Number – **39006**.
3. Navigate to: Customer Setup->Select Processor->Message format-> Select Standard 1.




ASAI Hyosung DCC Setup Instructions

4. Navigate to: Customer Setup->Standard 1 Options
 - a. Enable - Terminal Status.
 - b. Enable - Reversal at Host Error.



5. Navigate to: Customer Setup->Standard 1 Options -> Extended Functions
 - Enable Dynamic Flow.
 - Enable 1st Call.

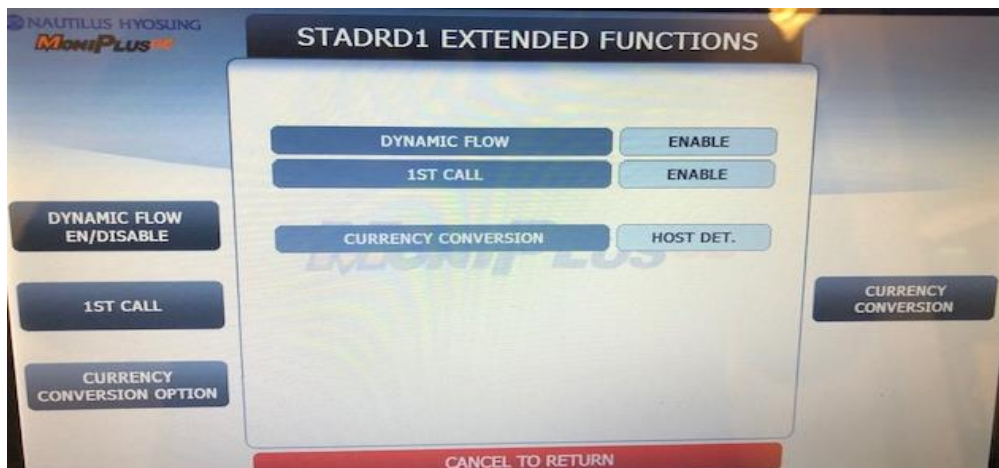

ASAI Hyosung DCC Setup Instructions

6. Navigate to: Customer Setup->Standard 1 Options -> Extended Functions -> Select Currency Conversion – this opens a new screen Currency Conversion Option
- Select the CIBC option.
 - Enable Local Surcharge.
 - On older software AP's: Enable Currency Conversion / (on some machines this setting will show as "Host Det.").

